MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil And Filter	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Fuel Additives	Add	Every 7,500 or 12 mos.		
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Battery Condition	Inspect	7,500	Inspect	Same As Normal
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter (For Evaporator And Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500 or 6 mos.
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Front Disc Brake/Pads, Calipers	Inspect	15,000	Inspect	More Frequently
Rear Brake Drums/Linings Rear Brake Disc/Pads	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake/Clutch Fluid	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses And Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	30,000	Inspect	Same As Normal
Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Manual Transmission Fluid	Inspect	37,500	Replace	75,000
EcoShift Dual Clutch Transmission Fluid	Inspect	37,500	Replace	75,000
Drive Belt (Alt, A/C)	1st Inspect 60,000 or 72 mos. Add. Inspect 15,000 or 24 mos.		Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	105,000 or 10 yrs.	Replace	More Frequently
Coolant	1st Replace 120,000 or 10 yrs. Add Replace 30,000 or 24 mos.		Replace	Same As Normal

*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual, If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing, however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-V2012
(Rev 08/25/11)
Printing 08/27/11

HYUNDAI **VELOSTER**

Quick Reference Guide

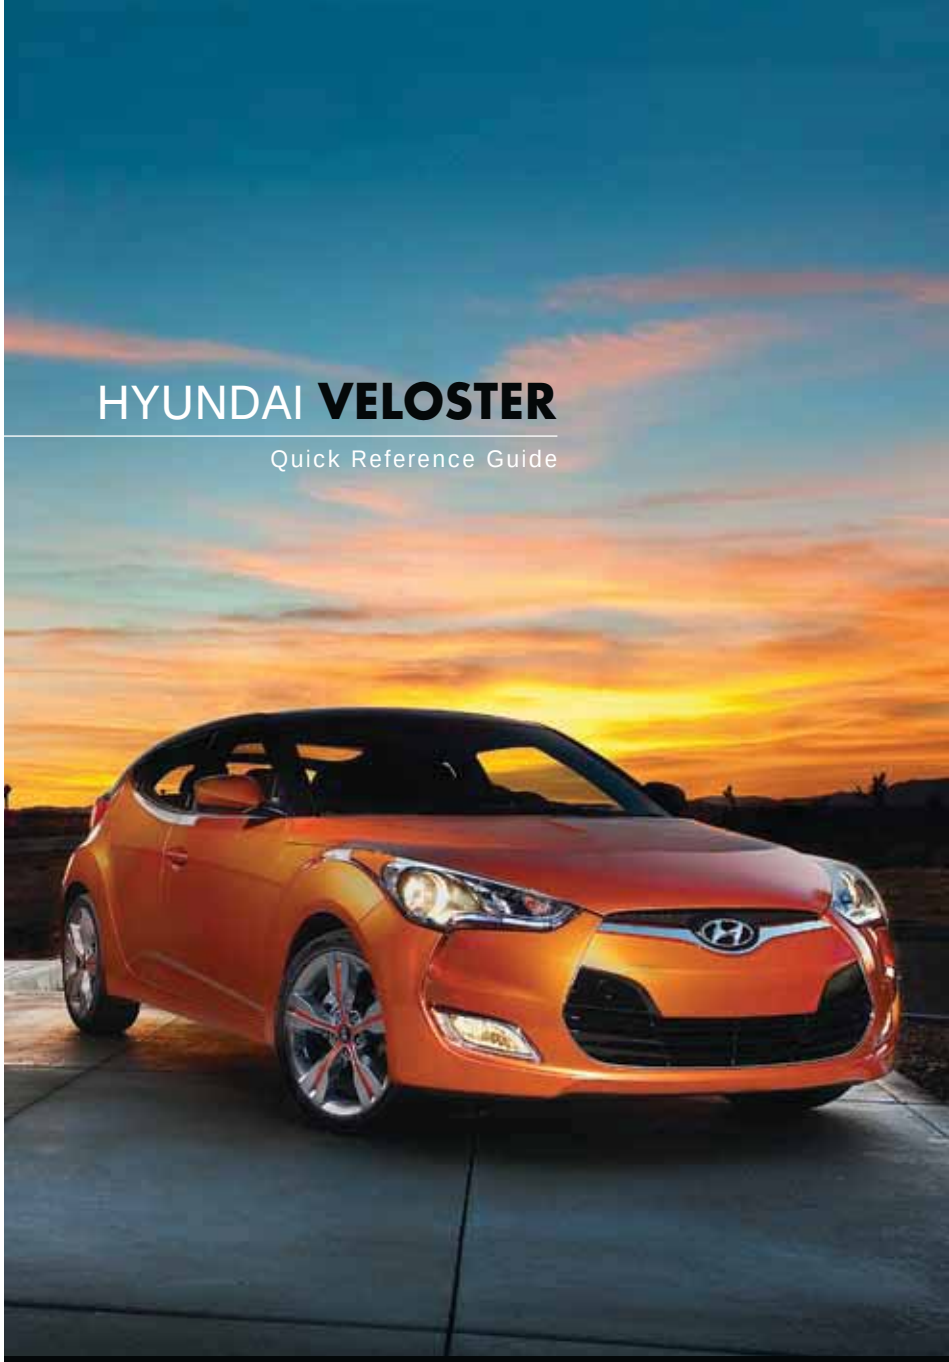

HYUNDAI www.hyundai.com

Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
XM® Radio: 1-800-967-2346
Blue Link: 1-855-2BLUELINK (1-855-225-8354)

Table of contents

GETTING STARTED

Engine Start/Stop 03
Remote keyless entry 02
Front seat adjustment 04
Headrest adjustment 04
Seat belt adjustment 05
Steering wheel adjustment 05

FEATURES AND CONTROLS

Active ECO System 25
AUX, USB,and iPod® Port 23
Child-protector rear door lock 09
Climate control 14
Clock adjustment 22
Cruise control system 24
Driver's windows/locks control 08
Electronic Stability Control (ESC) 25
Fuel Door 09
Head lights and fog lights 06
Instrument cluster 10
Interior lights 22
Outside rearview mirrors 08
Rearview camera 23
Sunroof 21
Trip computer 12
Tire Pressure Monitoring System (TPMS) 13
Wiper and washer 07

MULTIMEDIA

Audio 16
Navigation 17
Steering wheel controls 18
Bluetooth phone operation 19
Blue Link® Telematics system 20

DRIVING

Transmissions 26

*Some vehicles may not be equipped with all the listed features.

How to:
1. Pair phone to your vehicle. Refer to page 19.
2. Get started with Blue Link. Refer to page 20.

Steering wheel adjustments
Page 05

Instrument cluster
Page 10



Wiper and washer
Page 07



Audio/ Navigation
Page 16

Climate control
Page 14

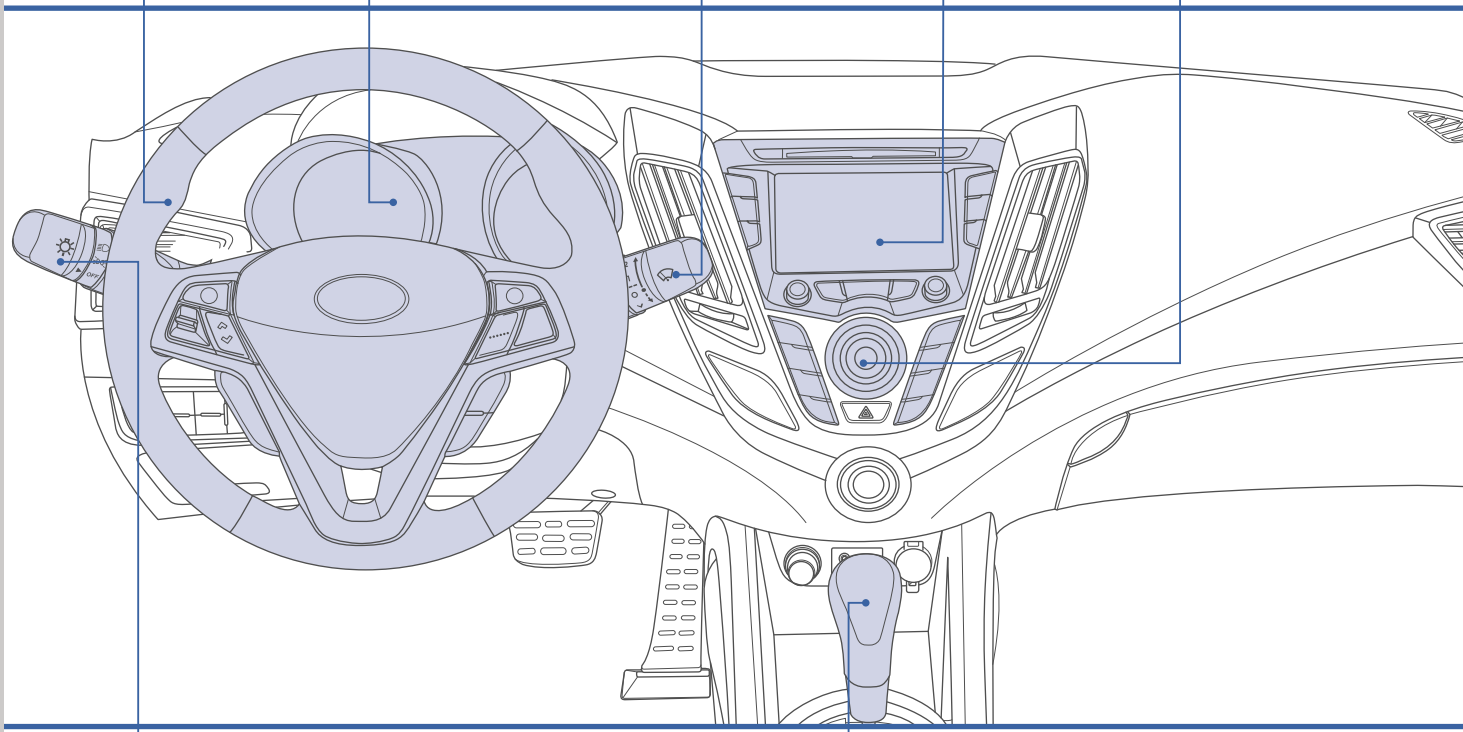



Head lights and fog lights
Page 06

Transmission
Page 26

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

⚠ WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

REMOTE KEYLESS ENTRY

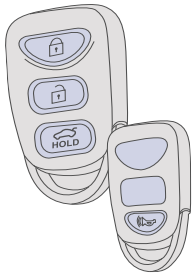

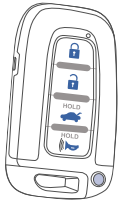

- Lock
- Unlock
- Tailgate unlock
- Panic

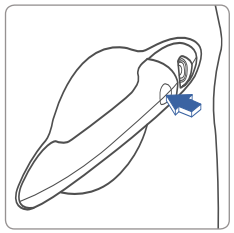

Driver's door Lock/Unlock

Smart key must be within range.

Press:

Once – Unlock driver door
Twice – Unlock all doors
Third – Lock all doors

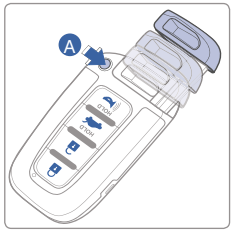

Remove mechanical key

Press and hold the release Ⓐ button and remove the key.

Reinstall mechanical key

Put the key into the key slot and push it until a click sound is heard.

ENGINE START/STOP BUTTON

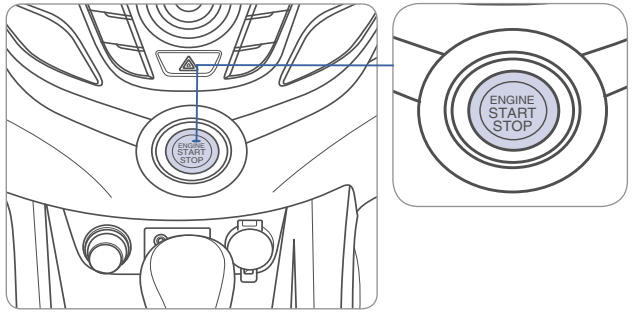

With the ignition OFF, press the engine start/stop button:

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

To start the engine, press the start/stop button while:

- EcoShift Dual Clutch Transmission: depressing the brake pedal.
- Manual Transmission: depressing the clutch and brake pedals.

To shut engine OFF, shift to:

- EcoShift Dual Clutch Transmission: P (Park) and press the start/stop button.
- Manual Transmission: Select 1st gear or Neutral, apply the hand brake, and press the start/stop button.

Emergency situations

- **Shut off engine while driving:**
  Press engine start/stop button for more than 2 seconds or press it 3 times consecutively within 3 seconds.
- **Restart engine while driving:**
  Press engine start/stop button with shift lever in N (Neutral).

FRONT SEAT ADJUSTMENT

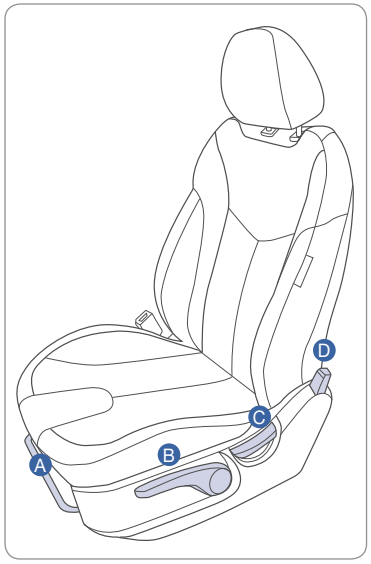

Ⓐ Forward and rearward



Ⓑ Seat cushion height (driver's seat only)



Ⓒ Seatback angle

Ⓓ Folding Lever (driver's seat only)

HEADREST ADJUSTMENT

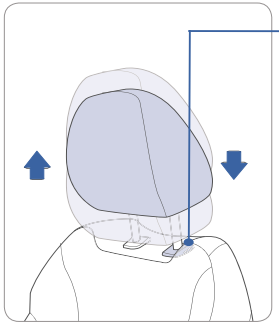

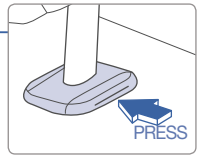

To Raise Headrest:
Pull headrest up.

To Lower Headrest:
Press lock knob while pressing down on headrest.

STEERING WHEEL ADJUSTMENTS

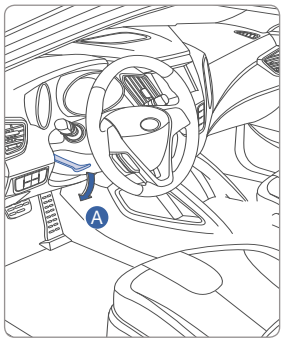

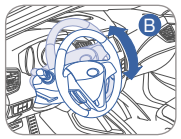

Tilt

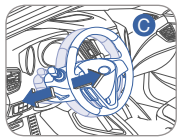

Telescopic

NOTE: Do not adjust while driving.

1. Pull the lever Ⓐ down to release.
2. Set the angle Ⓑ and distance Ⓒ
3. Pull the lever Ⓐ up to lock.

SEAT BELT ADJUSTMENT (Driver's Front seat)

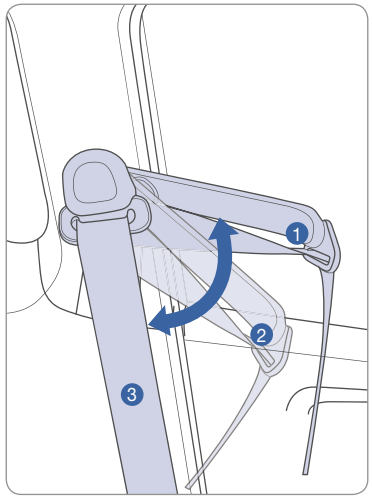

Set the belt extension guide to one of the 3 positions when using the seat belt.

See Owner's Manual for additional seat belt information.

HEAD LIGHTS AND FOG LIGHTS

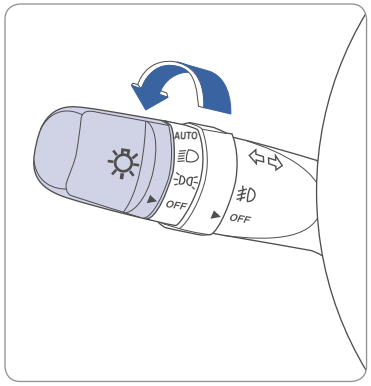

AUTO Auto light

Head light

Parking light

OFF OFF

Escort Function

Head lights will stay on for approximately 30 seconds after exiting and locking vehicle. Press remote lock button twice to turn head light off.

See Owner's Manual for more detail.

Turn signals and lane change signals

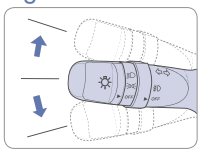

Flashing head lights

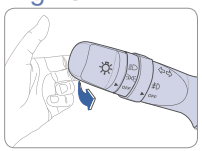

High beam

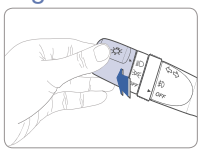

Fog light

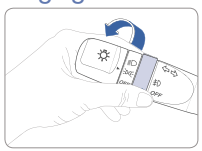

WIPER AND WASHER

Front Wiper and Washer

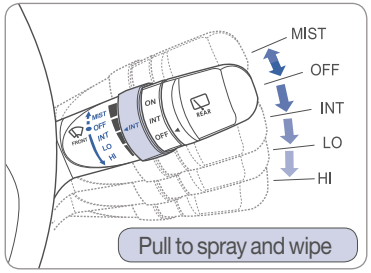

MIST - Single wipe

OFF - Off

INT - Intermittent wipe

LO - Normal wiper speed

HI - Fast wiper speed

Front Intermittent wipe time adjustment

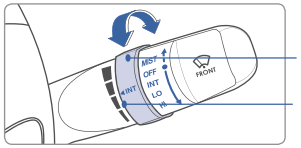

Fast wiper speed

Slow wiper speed

Rear Wiper and Washer

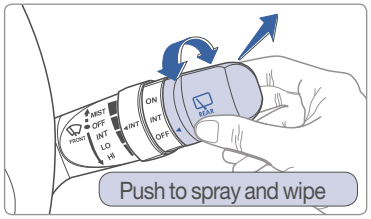

ON - Normal wiper operation

INT - Intermittent wiper operation

OFF - Wiper off

DRIVER'S WINDOWS/LOCKS CONTROL

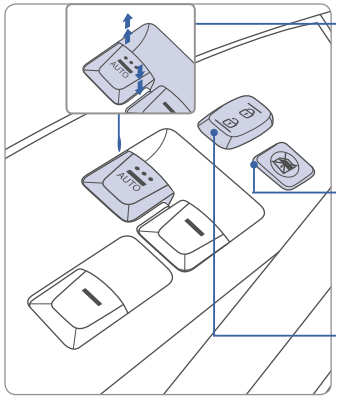

Window Auto down/up (driver's side only)
Press past detent to fully open/ close window.

Power Window Lock Switch
Disables the power window switches on the passenger doors.

Door Lock
Locks/unlocks all doors and hatch.

FUEL DOOR

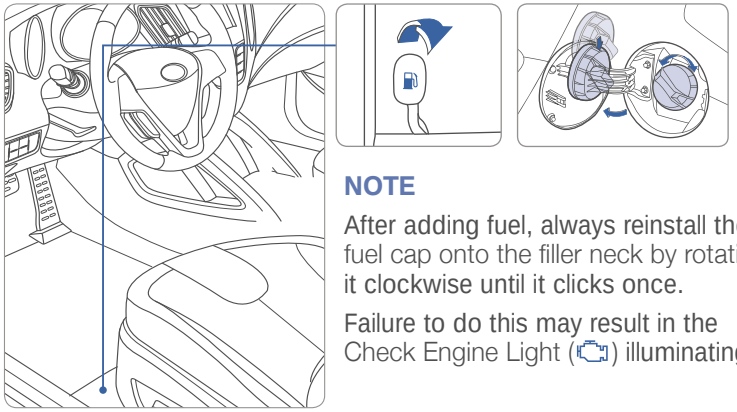

NOTE

After adding fuel, always reinstall the fuel cap onto the filler neck by rotating it clockwise until it clicks once.

Failure to do this may result in the Check Engine Light ( ) illuminating.

OUTSIDE REARVIEW MIRRORS

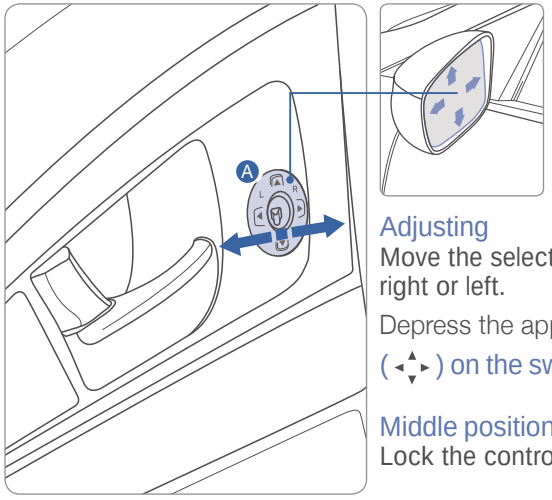

Adjusting
Move the selecting switch Ⓐ to the right or left.

Depress the appropriate direction ( ) on the switch.

Middle position
Lock the control.

CHILD-PROTECTOR REAR DOOR LOCK

Allows or prevents opening the rear door from inside of the vehicle.

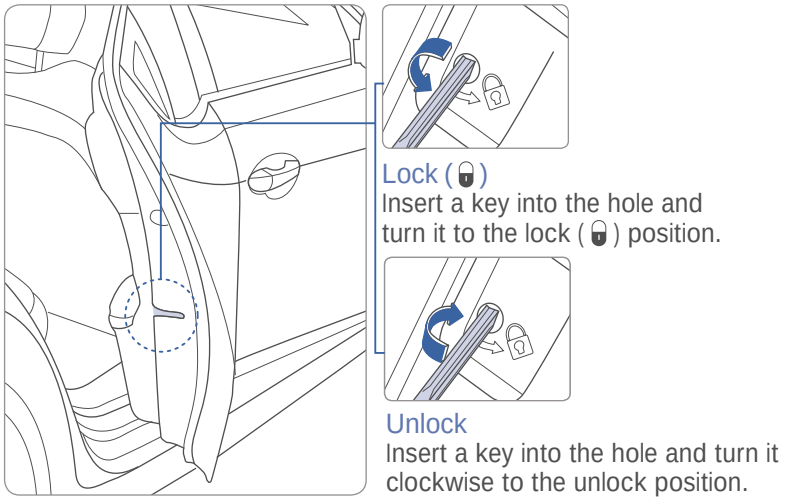

Lock ( )
Insert a key into the hole and turn it to the lock ( ) position.

Unlock
Insert a key into the hole and turn it clockwise to the unlock position.

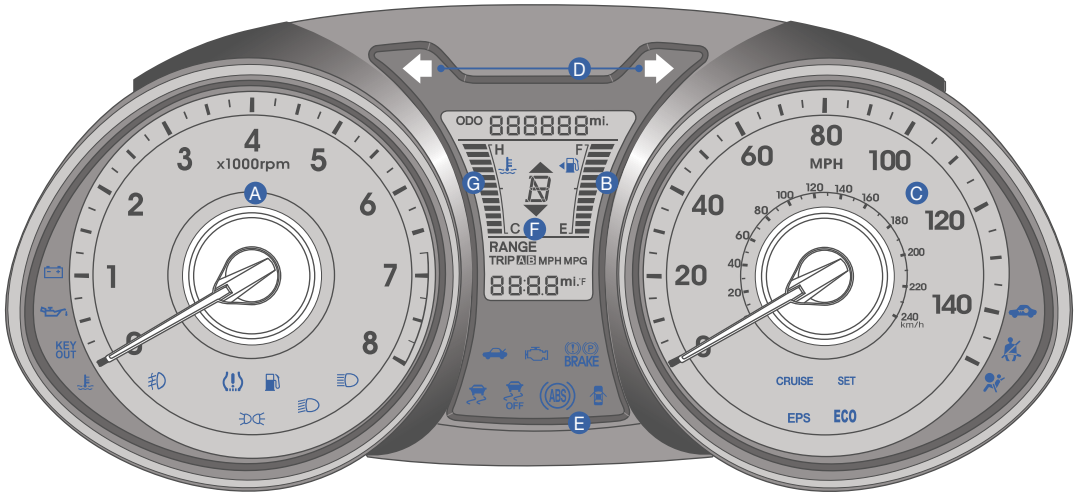

Cluster configuration

- Ⓐ Tachometer
- Ⓑ Fuel Gauge
- Ⓒ Speedometer
- Ⓓ Turn signal indicators
- Ⓔ Warning and indicator lights
- Ⓕ Odometer / Trip computer
- Ⓖ Engine Temperature Gauge

INSTRUMENT PANEL ILLUMINATION

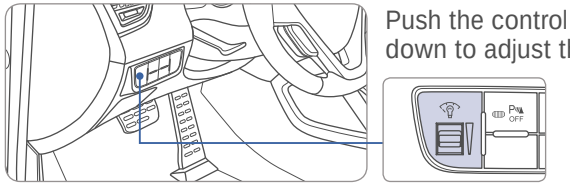

Push the control switch up or down to adjust the brightness

WARNINGS AND INDICATORS

Air bag warning light	Parking brake & Brake fluid warning light	ABS warning light
Seat belt warning light	Low Tire Pressure Indicator / TPMS (Tire Pressure Monitoring System) malfunction indicator	
High beam indicator	Engine oil pressure warning light	Charging system warning light
Electric Power Steering system warning light	Door open warning light	Turn signal indicator
Immobilizer indicator	EcoShift Dual clutch transmission indicator	Manual transmission shift indicator
Tailgate open warning light	Low fuel level warning light	ESC (Electronic Stability Control) indicator
ESC (Electronic Stability Control) OFF indicator	Cruise indicator	Cruise SET indicator
Malfunction indicator light	Front fog light indicator	Active ECO indicator
Light on indicator	Engine coolant temperature warning light	KEY OUT indicator
Low beam indicator		

TRIP COMPUTER

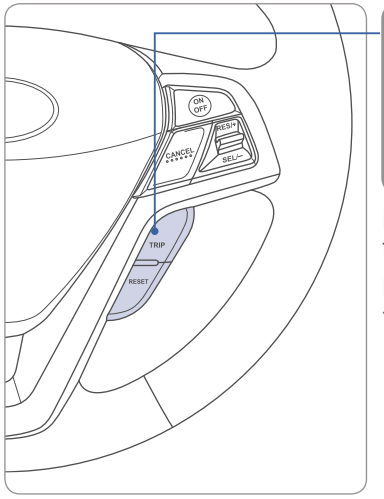

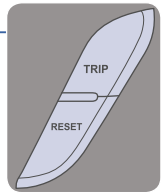

Press the TRIP button to select functions as shown below.

Press and hold the RESET button to reset the Tripmeter.

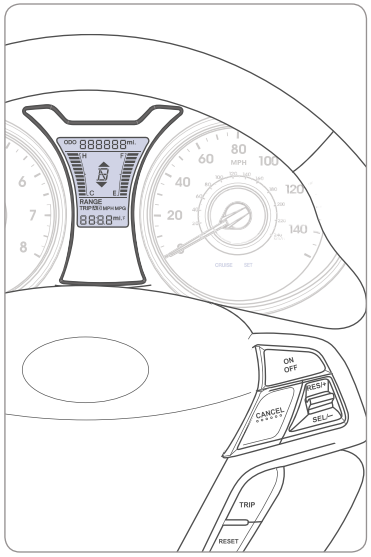

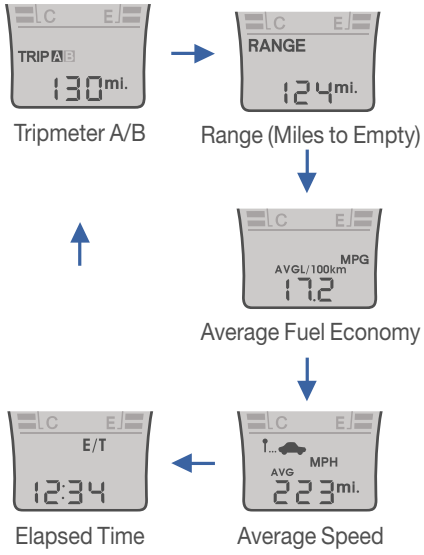

TIRE PRESSURE MONITORING SYSTEM (TPMS)

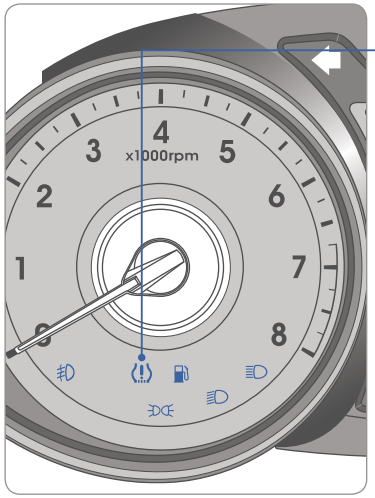

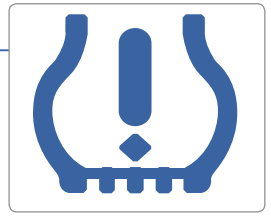

Low tire pressure indicator / TPMS malfunction indicator

Low Tire Pressure Indicator

Illuminates if one or more of your tires is significantly under-inflated.

TPMS Malfunction Indicator

Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer.

CLIMATE CONTROL

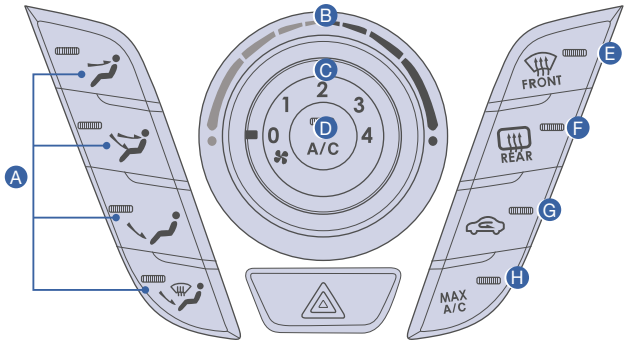

- A Mode selection buttons
- B Temperature control knob
- C Fan speed control knob
- D Air Conditioning button
- E Front windshield defrost button
- F Rear window defroster button
- G Air intake control button
- H MAX Air Conditioning button

MODE SELECTION

- Face Level
- Bi Level
- Floor Level
- Floor Defrost Level

AIR INTAKE CONTROL

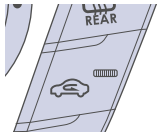

This is used to select outside (fresh) air position or recirculated air position.

- Outside (fresh) air position
- Recirculated air position

DEFROSTING / DEFOGGING

1. Press the front windshield defrost control.

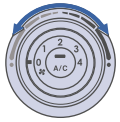

2. Set the temperature control to the warmest setting.



3. Set the fan speed to the highest setting.

NOTE

To reduce the tendency of the glass fogging and improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner.

REAR WINDOW DEFROSTER

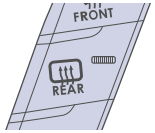

Press to activate / deactivate the rear defroster.

AUDIO

Non-Navigation

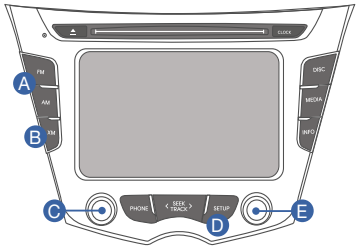

Navigation

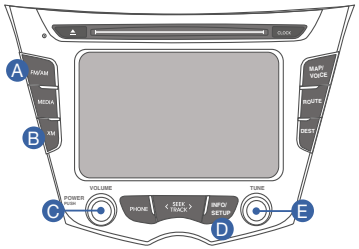

Press POWER button Ⓒ to turn radio on.

- TUNING/LISTENING TO CHANNELS
  1. Press FM/AM Ⓐ or XM® Ⓑ.
  2. Rotate TUNE Ⓔ to desired channel.

NOTE

A clear view of the southern sky is recommended to ensure XM® radio reception.

- SETTING PRESET BUTTONS

  Six preset frequencies each for FM1/FM2/AM modes can be stored manually.

  1. Select the band (FM1, FM2, AM) you want to store a station into.
  2. Select the desired station.
  3. Touch and hold one of the preset buttons until audible beep is heard.

- ADUSTING THE SOUND
  1. Press SETUP Ⓓ.
  2. Touch “Sound” on screen.
- Touch the arrows on screen to adjust desired sound setting.

Please refer to your Owner’s Manual for more detailed information on how to use your audio system.

Complimentary XM® subscription ends three months following the vehicle date of sale.

Please contact XM® Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM® subscriptiion.

NAVIGATION

Map position

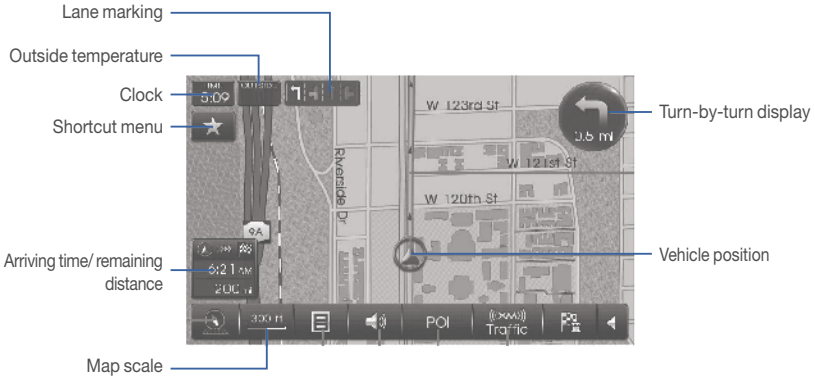

Destination menu

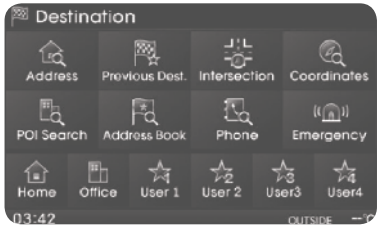

- Address: Finds a destination by setting an address.
- Previous Destinations: Destination you have previously entered.
- POI (Point of Interest) Search: Search for a destination category or name.
- Emergency: Finds a destination by searching for a police station, hospital or Hyundai dealership.

Playing Pandora

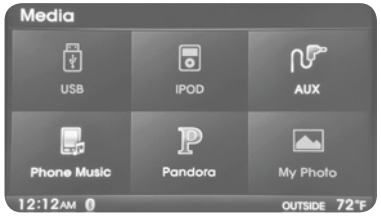

NOTE Only compatible with iPhone

1. Ensure you have Pandora app on your iPhone.
2. Pair your iPhone to the Bluetooth system.
3. Select “Media” on Audio screen.
4. Select “Pandora”.
5. Initiate Pandora app on your iPhone.

STEERING WHEEL CONTROLS

Audio control

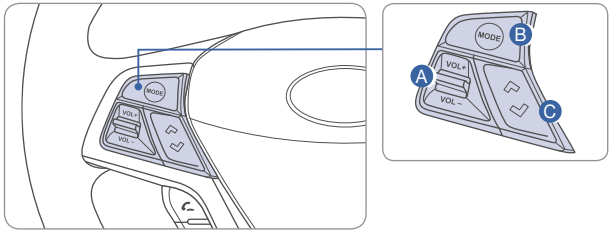

A VOLUME
Raise or lower speaker volume.

B MODE
Change the audio source.
Hold to turn Audio power ON/OFF.

C SEEK/PRESET
Press to change presets.
Press and hold to seek stations.

Bluetooth control

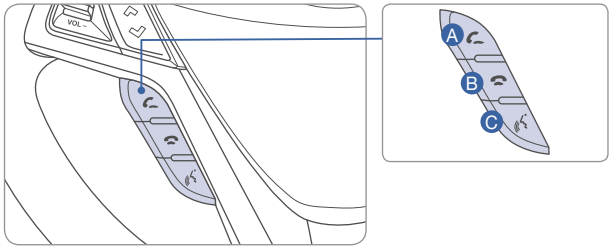

A CALL
Place and transfer call.

B END
End call or cancel function.

C TALK
Activate voice recognition.

NOTE: If experiencing difficulty using Voice Recognition to place a call, be sure you are using the actual full contact name as entered in your phone book, not a casual or nick-name (e.g., if name was entered as “Robert Smith”, say “Call Robert Smith”, not “Call “Bob Smith”).

BLUETOOTH PHONE OPERATION

Phone setup (pairing phone)

1. Press PHONE button on the radio or on the steering wheel remote control.
2. Touch “Yes” to search for Bluetooth phones.

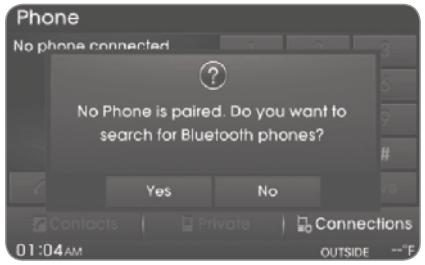

3. In your phone, initiate a search for Bluetooth devices.
4. After search is completed in your phone, select “Veloster”.
5. Input the passkey displayed on screen to your phone.

Please visit www.hyundaiusa.com\Bluetooth for a list of compatible phones tested to work with Hyundai’s Bluetooth® system.

BLUE LINK TELEMATIC SYSTEM

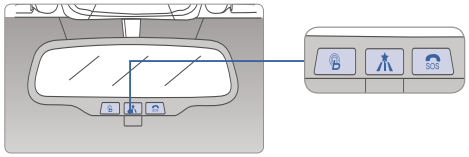

Press the button for access to the voice-response menu of services.

You have two options:

- You can say, “Main Menu” for a listing of main menu choices.
- You can directly select any of the listed menu items by saying its name.

Navigation	Information	Essentials	Vehicle Assist
New Destination	Traffic	Voice Texting	Roadside Assistance
Gas Prices	Weather	Location Sharing	Agent Assistance
Restaurant Ratings	Valet Alert	Main Menu	Service Link
Route Assistance	Main Menu		Quick Tips
Daily Route Guide			Main Menu
Main Menu			

- Press the button for navigation-related services.
- Press the SOS button for SOS Emergency Assistance.
- Refer to your Blue Link User’s Manual for detailed information on system operation.
- For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-2225-8354).
- Please register your Blue Link at www.myhyundai.com.

Blue Link feature availability is dependent upon your Blue Link subscription package(s).

SUNROOF

Sliding the sunroof

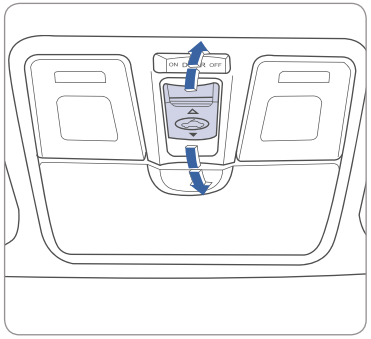

To Open

Press switch rearward.

Press switch rearward past the detent to open completely.

To Close

Press switch forward and hold.

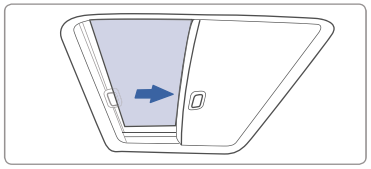

Tilting the sunroof

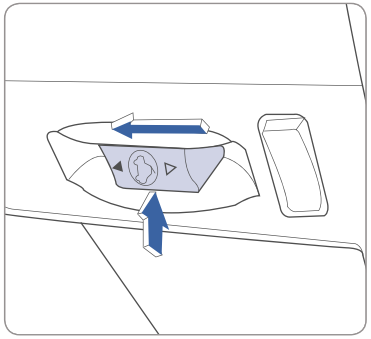

To Tilt

Press or pull switch up or down.

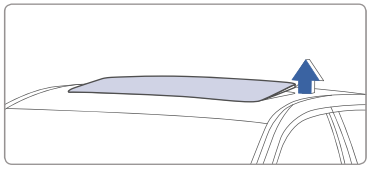

CLOCK ADJUSTMENT

Time Setup

1. Press and hold CLOCK Ⓐ.
2. Touch ▲ or ▼ to set the clock.
3. Touch “Done” when finished.

INTERIOR LIGHTS

Map lamp

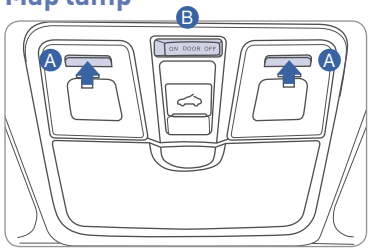

Push the lens Ⓐ to turn the map lamp on or off.

Switch Ⓑ

ON
Map lamp and room lamp will turn on.

DOOR
Map lamp and room lamp will turn on when any door is open except tailgate.

OFF
The lights stay off at all times, except when individually turned on.

Room lamp

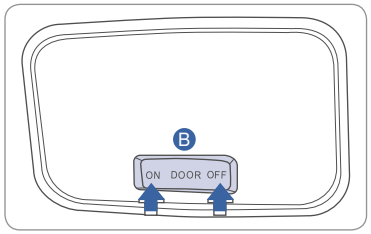

REARVIEW CAMERA

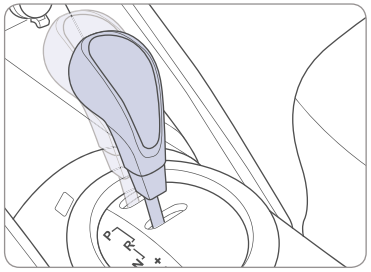

The rearview camera will activate when the ignition switch is ON and the shift lever is in the R (Reverse) position.

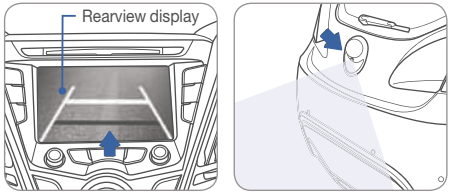

AUX, USB AND iPod® PORT

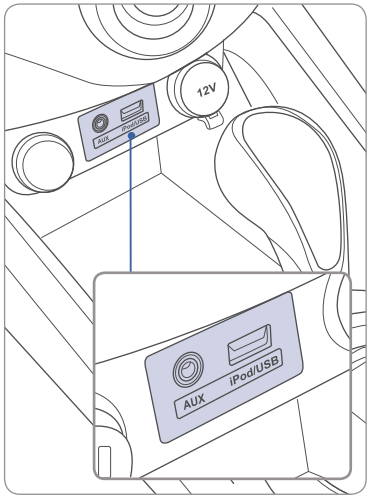

Use these jacks to connect an external USB, audio or video device.

To view compatible video, connect the device to the supplied Hyundai RCA adapter video cable. Then connect the RCA adapter cable to the AUX jack.

NOTE

To operate your iPod® through the vehicle’s audio system, connect your Apple supplied USB cable to the USB port.

iPod® is a trademark of Apple Inc.

CRUISE CONTROL SYSTEM

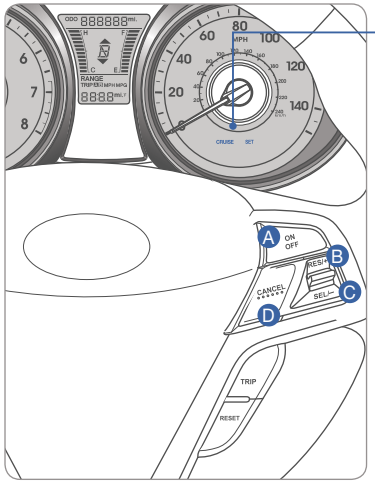

CRUISE Cruise indicator

SET Cruise set indicator

To set a cruising speed

1. Press ON/OFF button Ⓐ and the CRUISE indicator will illuminate in the instrument cluster.
2. Accelerate to desired cruising speed (above 25 mph). Press SET- button Ⓒ and remove your foot from the accelerator pedal.

To accelerate or decelerate

Press RES + button Ⓑ up to increase set cruising speed.

Press SET - button Ⓒ down to decrease set cruising speed.

To cancel cruising speed

Press CANCEL button Ⓓ or depress brake pedal, or press ON/OFF button Ⓐ.

ELECTRONIC STABILITY CONTROL (ESC)

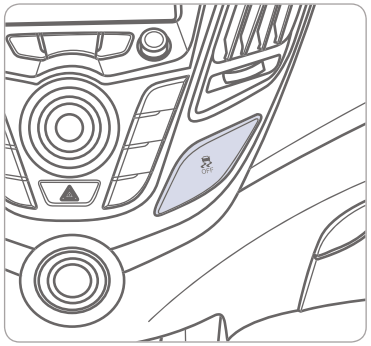

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

Press OFF to turn ESC on or off.

ACTIVE ECO SYSTEM

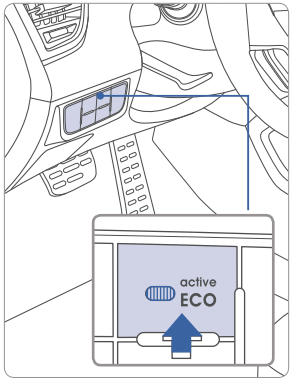

Active ECO System helps improve fuel efficiency by controlling the engine and transmission.

Active ECO on - For optimal fuel efficiency

Active ECO off - For optimal performance and drivability.

To improve your fuel efficiency:

- Accelerate at a moderate rate
- Keep tires inflated to the recommended pressure on the placard
- Be sure the wheels are properly aligned
- Avoid unnecessary braking
- Drive between 55-65 mph on the freeway

TRANSMISSIONS

EcoShift Dual Clutch Transmission

EcoShift Dual Clutch Transmission technology provides automatic shifting and excellent fuel economy based on manual transmission efficiency.

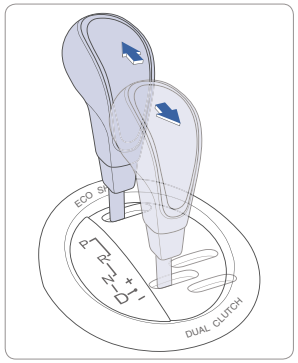

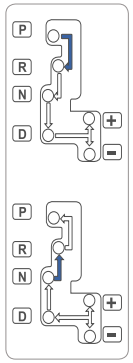

(➡) : Depress the brake pedal when shifting.

(⇨) : The shift lever can be shifted freely.

P : Park

R : Reverse

N : Neutral

D : Drive

[+] : Sport Mode Upshift

[–] : Sport Mode Downshift

Paddle shifters

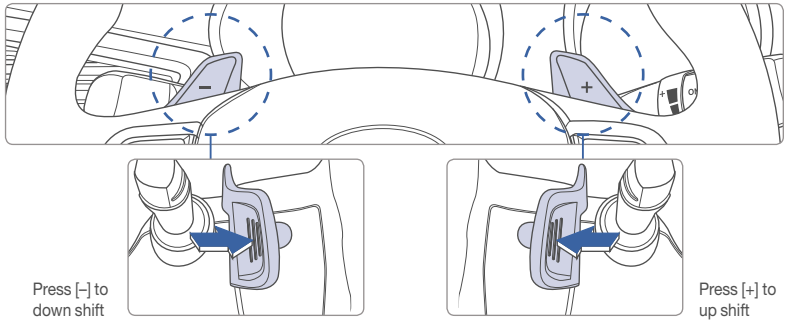

The paddle shifters operate when the shift lever is in the D position or the Sport Mode.

- When you pull the [+] or [–] paddle shifter once, the system changes from automatic mode to Sport Mode.
- When paddle shifters are no longer used the system changes back to automatic mode.

NOTE

If you pull the [+] and [–] paddle shifters at the same time, the transmission will not change gears.

NOTE - EcoShift Dual Clutch Transmission characteristics

The new technology of the ECOShift Dual Clutch Transmission is different than a traditional automatic or manual tranmission:

- The EcoShift Dual Clutch Transmission is an automatically shifting manual transmission.
- EcoShift Dual Clutch Tranmission utilizes two clutches connected to a computer-controlled manual gearbox. It provides the convenience of a tranmission that shifts automatically, with the effeciency of a manual transmission.
- When you turn the ignition on and off, you may hear clicking sounds as the transmission solenoids turn on and off, cycling through a self test. This is a normal sound for the EcoShift Dual Clutch Transmission.
- When you stop on a hill, if you remove your foot from the brake pedal, the vehicle will remain stationary for approximately two seconds to prevent the vehicle from rolling backwards. If you depress the accelerator pedal during the two second interval, the vehicle will accelerate. If you wait more than two seconds, the vehicle will enter creep mode and may roll backwards if the hill is steep.

Caution

- You should always use the foot brake to hold the car on a hill until you are ready to drive. Using creep mode to hold the car on a hill may damage the clutch.
- An overload of the clutch is indicated by a shudder or vibration and a blinking warning light. To prevent clutch damage, the clutch will release. If the clutch is released, apply the foot brake and wait a few of minutes before driving. Ignoring these warnings and wait time can lead to transmission damage.

Manual Transmission

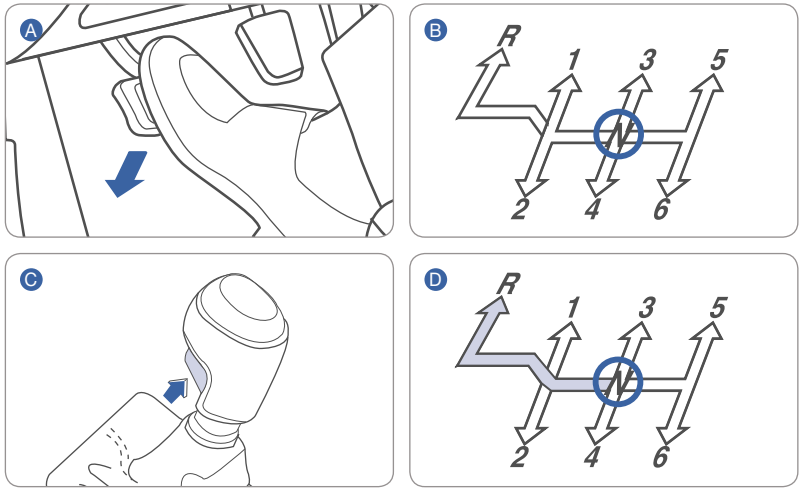

Shifting into Reverse

1. Fully depress the clutch Ⓐ
2. Shift into Neutral Ⓑ
3. Pull the Shift Lever Knob Ⓒ
4. Shift into Reverse Ⓓ

Key Websites

Hyundai website - www.hyundai.com
Hyundai owner website - www.myhyundai.com
Bluetooth phone compatibility - www.hyundaiusa.com/bluetooth
Blue Link - www.hyundaiusa.com/Bluelink/Overview.aspx

VELOSTER CUSTOMER DELIVERY CHECK LIST (continued)

☐ BLUETOOTH

- Show phone compatibility website: www.hyundaiusa.com/bluetooth
- Make a test call using customer's paired phone
- Demonstrate Voice Recognition (VR)

☐ BLUE LINK

- Show website: www.hyundaiusa.com/Bluelink/Overview.aspx
- Demonstrate Point of Interest (POI) search and download

☐ WINDSHIELD WIPER/WASHER

- Explain wiper function (int speed, front & rear wipers) and how it may differ from customer's previous vehicle

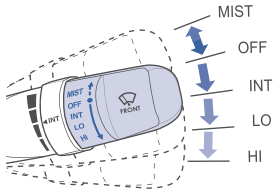

☐ CLOCK

- Demonstrate how to set clock (including daylight savings setting for Navigation equipped vehicles)

☐ VEHICLE SETTINGS

- Demonstrate vehicle settings in instrument cluster

☐ ECOSHIFT DUAL CLUTCH TRANSMISSION

- Explain DCT characteristics

Sales Consultant	Date	Sales Manager	Date
Customer			Date
Email	@		

VELOSTER CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

☐ CONFIRM "GOOD BATTERY" USING GR8 AND STAPLE TEST TICKET HERE

☐ CONFIRM COLD TIRE PRESSURE IS SET TO PLACARD

☐ CONFIRM SHIPPING FUSE IS IN POSITION

☐ VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES - CLEAN WINDSHIELD AND BACK WINDOW

☐ ENSURE FLOORMATS ARE SNAPPED INTO PLACE (if applicable)

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

☐ Defrost - page 14

1. Press the front defrost button.
2. Set to warmest temperature setting.
3. Set to highest fan speed.